

# TECHNICAL INSTRUCTION BULLETIN



32 Case Street  
Poland, NY 13431  
Tel: 800-848-8483  
315-826-3600  
Fax: 315-826-7471

[www.PerfexOnline.com](http://www.PerfexOnline.com)  
e-mail: [perfex@perfexonline.com](mailto:perfex@perfexonline.com)

## SUBJECT: TruCLEAN® Sponge Mop

Designed specifically for use in cleanroom and sterile environments, the TruCLEAN Sponge Mop is ideal for cleaning and disinfecting applications requiring high absorbency and very low particulate generation.

Made of a specially formulated grade of flexible polyurethane foam, the TruCLEAN Sponge Mop has excellent chemical and microbial resistance. Single cell structure has superior liquid retention and effectively captures minute particles. Exceptional abrasion and tear resistance. Thick-bodied foam protects delicate surfaces. Rinses clean and dries quickly.

To avoid cross-contamination issues, TruCLEAN Sponge Mop is recommended for single use.


## INSTRUCTION: Mounting and Dismounting Instructions for TruCLEAN Sponge Mop



Squeeze and hold wire at semi-circular cut-outs until collapsed frame ends meet.



Fold TruCLEAN Sponge Mop in half and slide onto collapsed frame ends as far as possible.

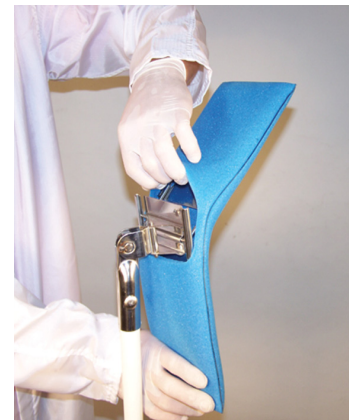

Close mop frame slowly, lifting sponge over locking mechanism. Mop frame will click-in-place when properly mounted.

***Autoclave Sterilization: Dampen TruCLEAN Sponge Mop prior to placing in autoclave. Withstands 30 minutes @ 250°F (121°C).***